

# THE ENGINE & INTERIOR

# FLOOR PANEL

Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## THE PARTS YOU WILL NEED:


### READER-ASSEMBLED PARTS

- Driver's seat
- Monitor screen
- Weapons tray

### NUMBERED PARTS:

- 005-B** : Control console
- 029-E** : Gear stick
- 030-A** : The pedals
- 031-A** : Handbrake
- 031-B** : Stunt team effects box
- 031-C** : Gear stick retainer
- 032-A** : Ejector seat lever
- 032-B** : Lever cover #1
- 032-C** : Lever cover #2
- 033-A** : Spring housing rear
- 033-B** : Spring housing front
- 034-A** : Ejector seat trigger
- 034-B** : Ejector seat spring
- 034-C** : Rear seat
- 034-D** : Middle part rear seat
- 035-A** : Floor panel

- SCREWS** : Type E (x2), F (x4), J (x3), L (x3), O (x7), Q (x3), U (x2), Y (x2)

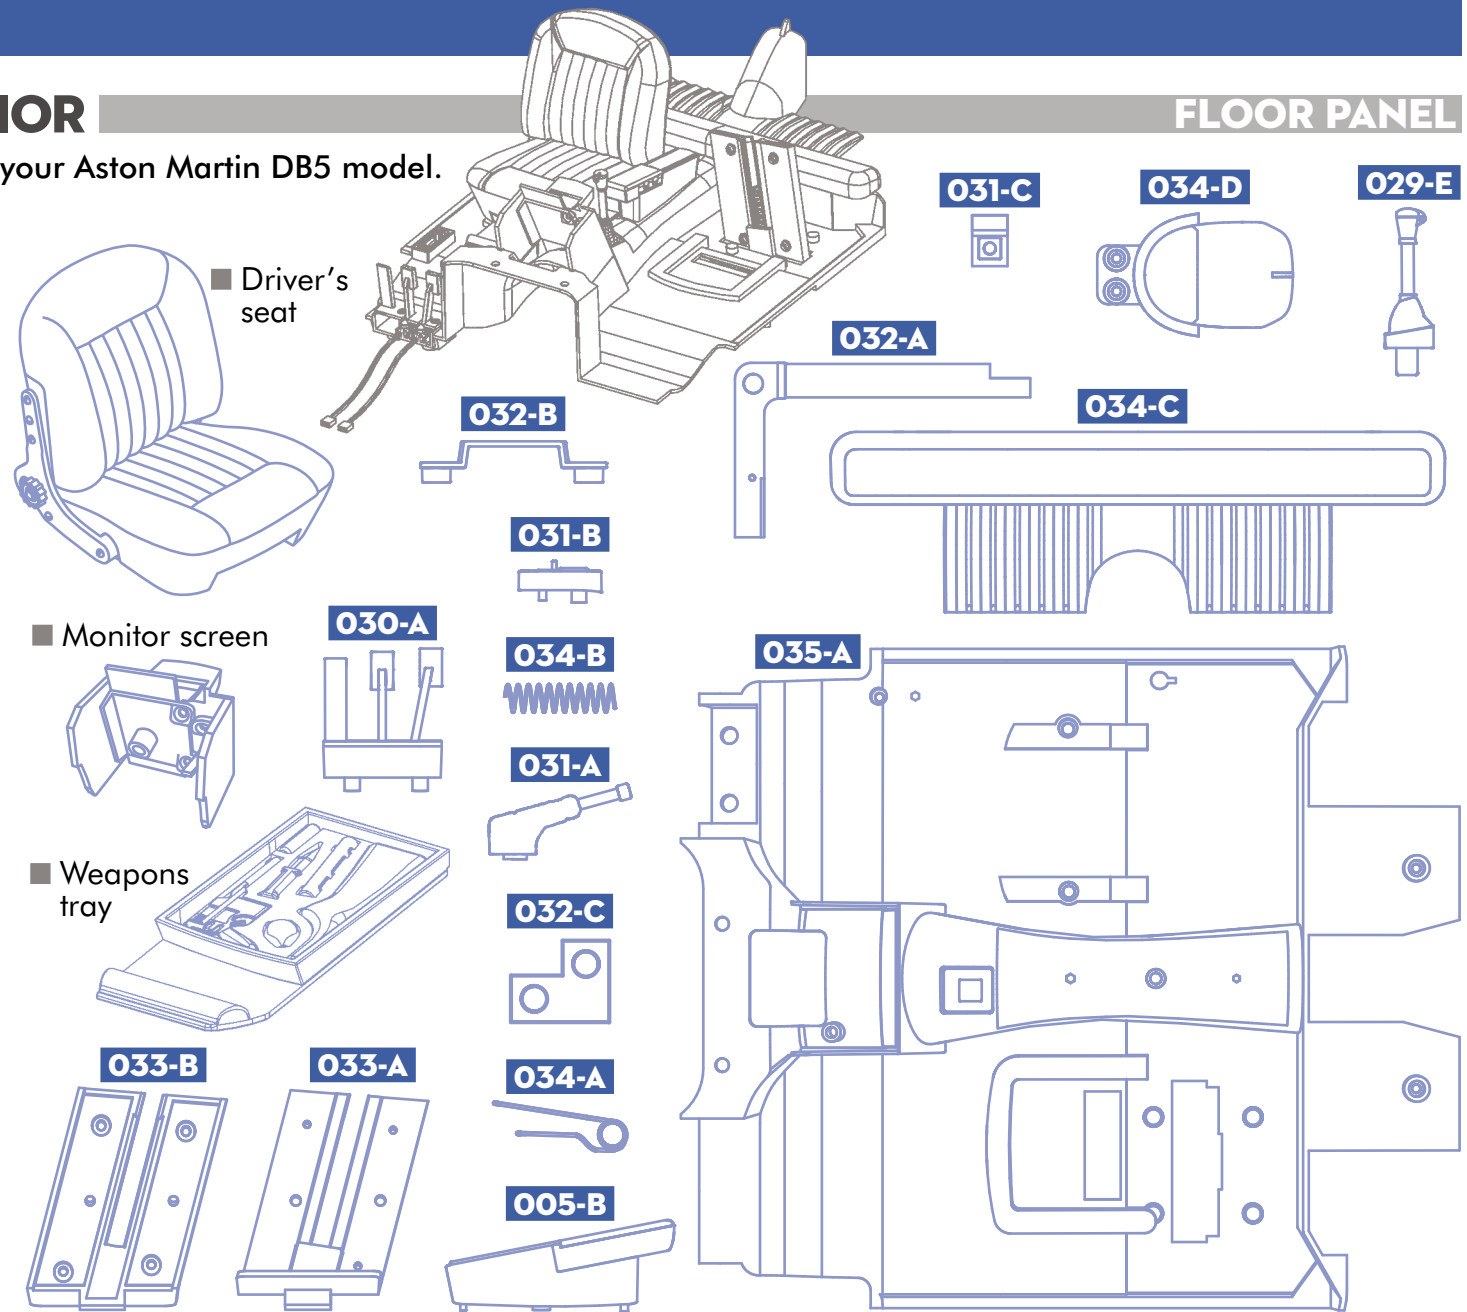

### SCREWS



Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 1

### PEDALS

**PARTS: 030-A, 035-A**

Fit the pre-assembled pedals (**030-A**, electronic connections not shown) to the base of the floor panel (**035-A**), making sure that the electronic wires kept free. Screw it in with two Type U screws.

FIGURE: 1


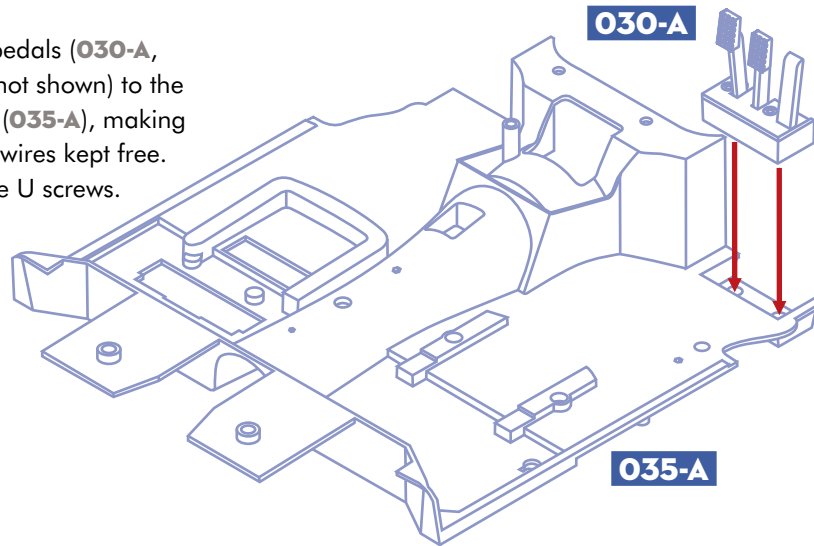


FIGURE: 2

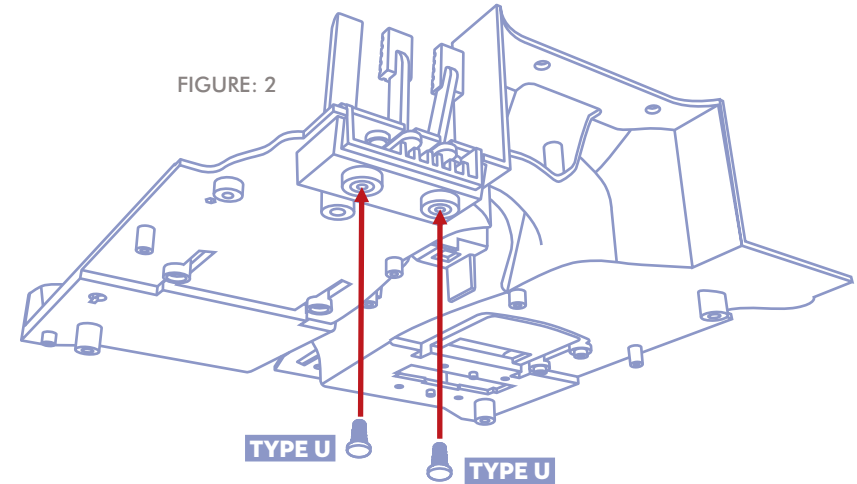

## STEP 2

### EFFECTS BOX

**PARTS: 031-B, 035-A**

Fit the stunt team effects box (**031-B**) to the floor panel as shown, fixing with a Type L screw driven through the underside of the floor panel.

FIGURE: 1


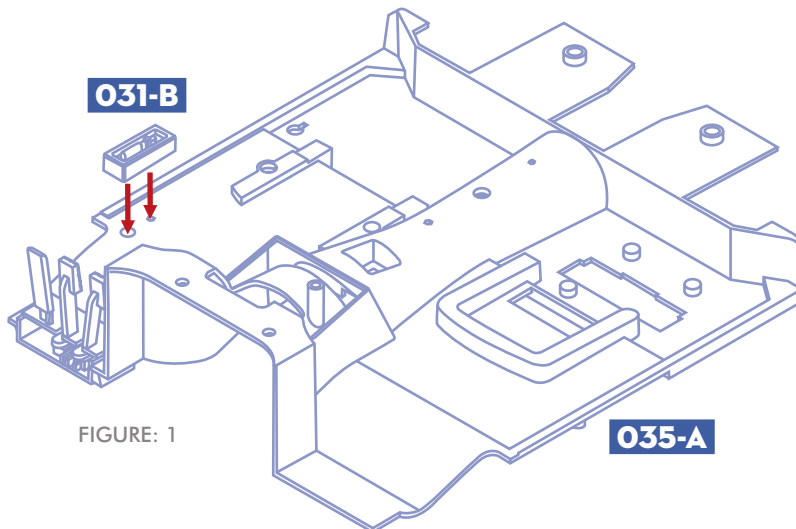


FIGURE: 2

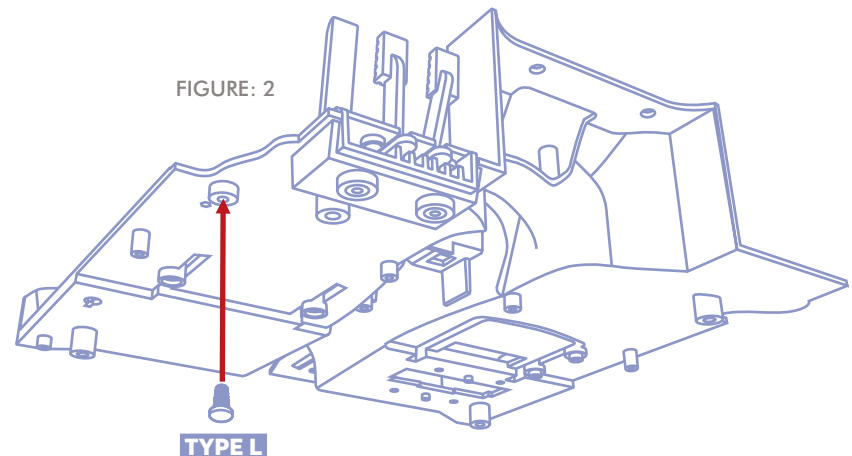

# THE ENGINE & INTERIOR

# FLOOR PANEL

 
 
Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 3

### HANDBRAKE

**PARTS: 031-A, 035-A**

Fit the handbrake (**031-A**) to the floor panel (**035-A**). Holding the handbrake and panel together, screw a Type Q screw through the underside of the floor panel.

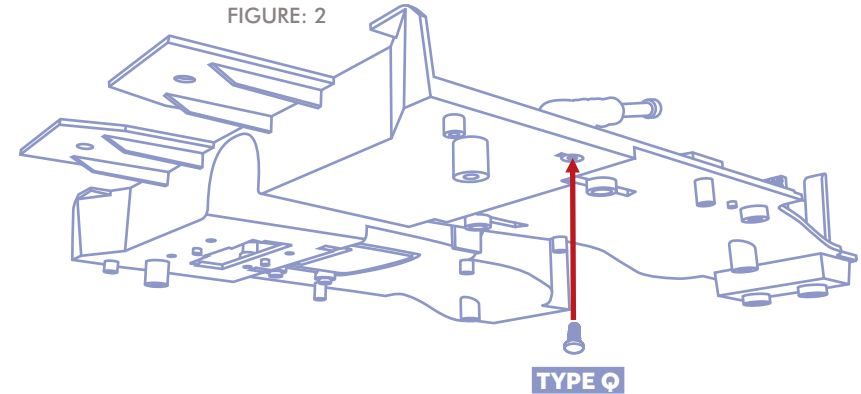
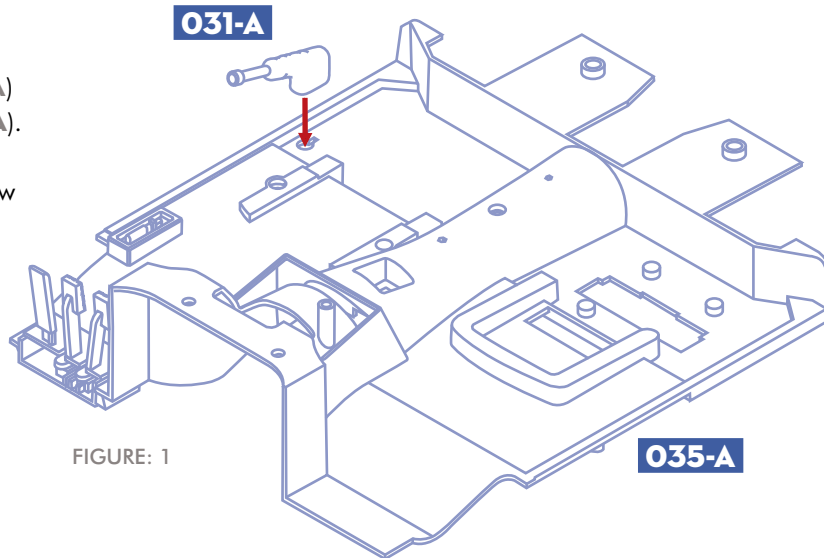


## STEP 4

### MONITOR SCREEN

**PARTS: 035-A, MONITOR SCREEN SECTION**

At the front and centre of the floor panel (**035-A**) is a peg on which you can fit the monitor screen section, which is then fastened with a Type J screw.

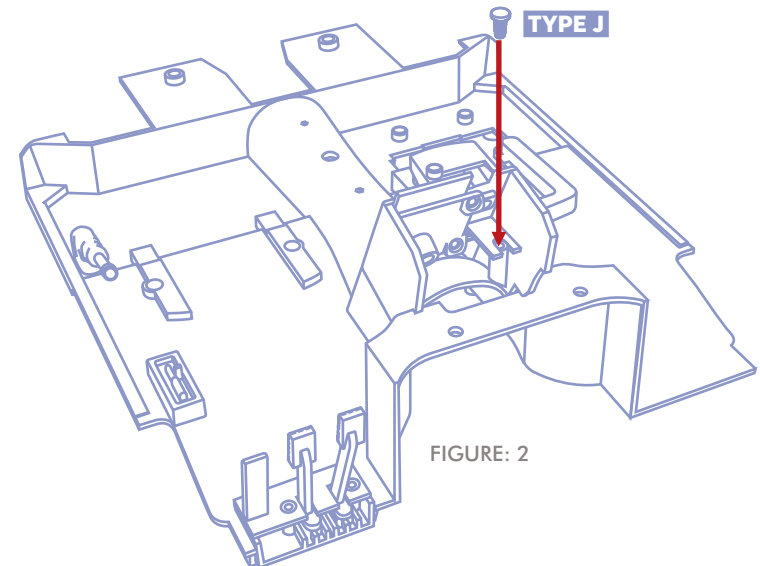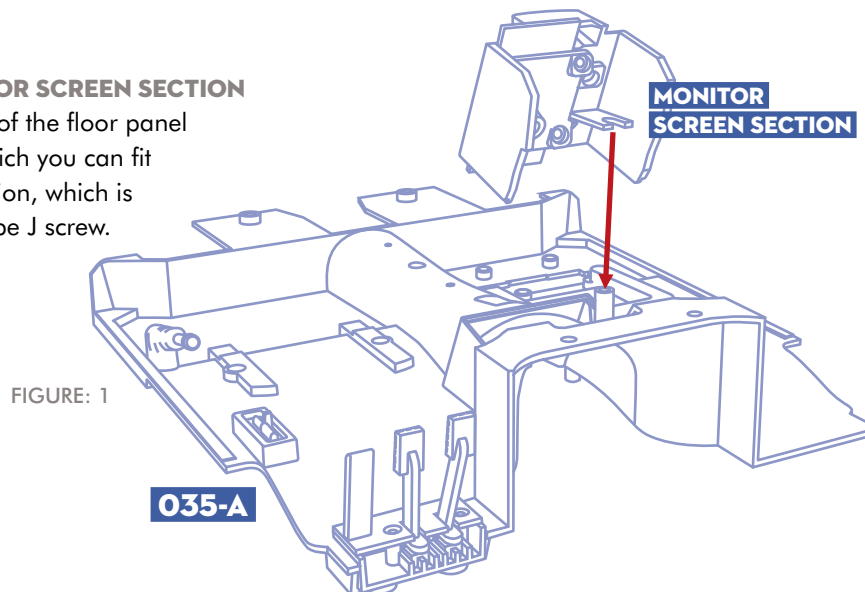

# THE ENGINE & INTERIOR

# FLOOR PANEL

Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 5

### CONTROL CONSOLE

**PARTS: 005-B, 035-A**

In the raised central section of the floor panel, carefully but firmly clip on the control console (**005-B**). There are two pegs that fit on to the floor panel. There is also a third central peg that must be fastened through the underside of the floor panel with a Type Y screw.


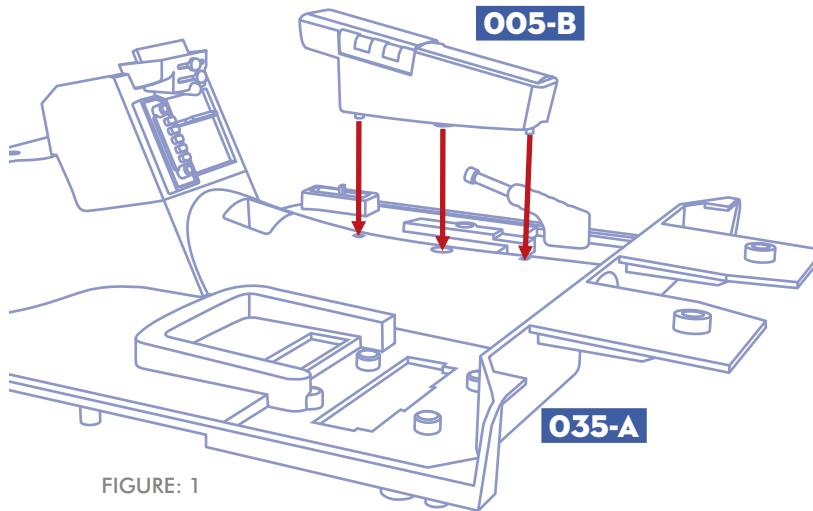


FIGURE: 2

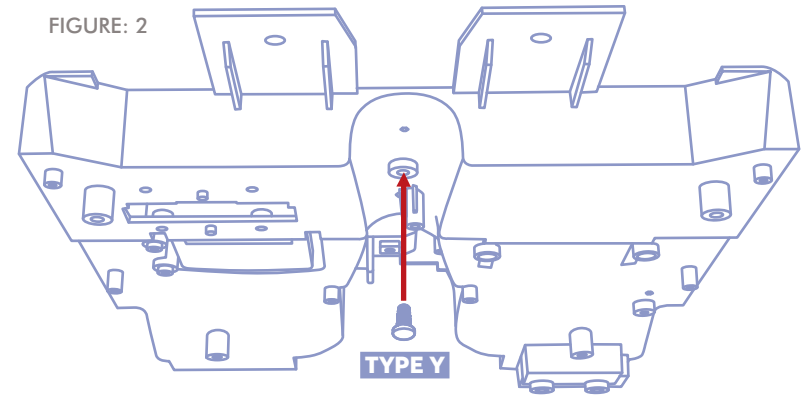

## STEP 6

### GEAR STICK

**PARTS: 029-E, 031-C, 035-A,**

In front of the control console is a space for the pre-assembled gear stick section (**029-E**). Clip the gear stick in. On the underside of the floor panel (**035-A**) clip the gear stick retainer (**031-C**), making sure the thinner end points to the right of the floor panel. This is retained with a single Type J screw from underneath the floor panel.


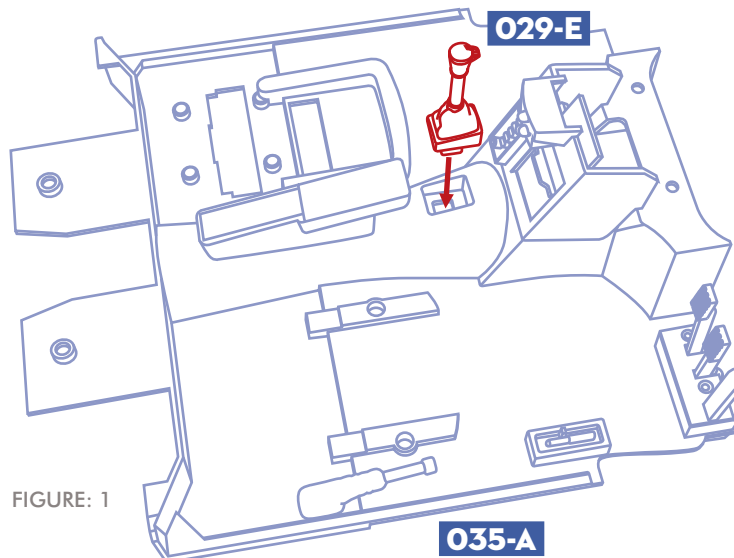


FIGURE: 2

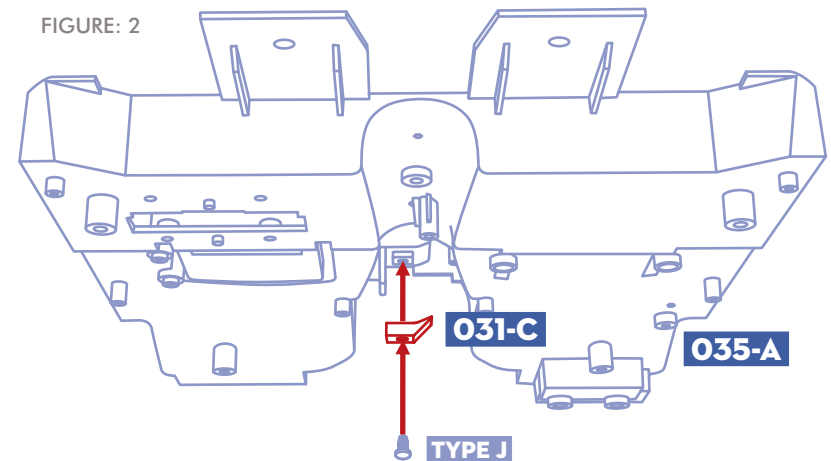

Put the assembled section to one side for a moment.

# THE ENGINE & INTERIOR

# FLOOR PANEL

Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 7

### TRIGGER HOUSING

**PARTS: 033-A, 033-B, 034-B**

Put the trigger housing (**033-A, 033-B**) together with the ejector seat spring (**034-B**) in the centre. Fasten the two sides of the trigger housing together with four Type O screws.

FIGURE: 1

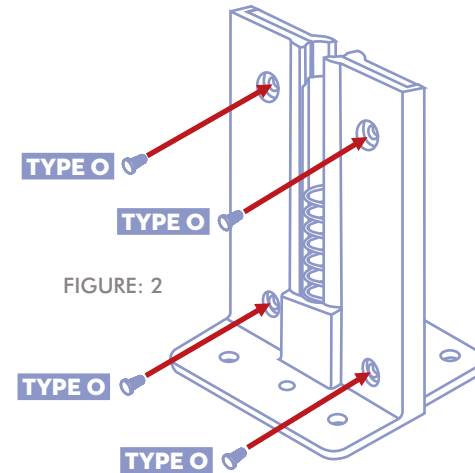
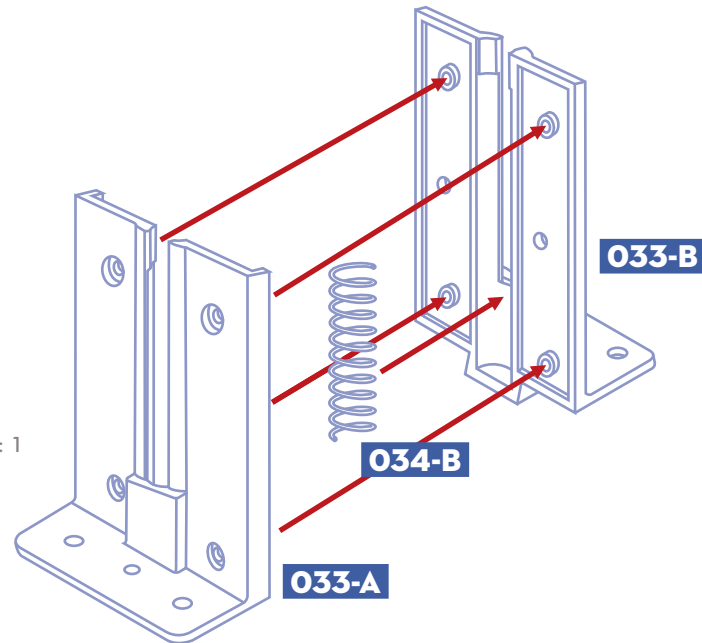


FIGURE: 2

## STEP 8

### PARTS: ASSEMBLED FLOOR PANEL, TRIGGER HOUSING

Feed the trigger housing through the underside of the floor panel.

Use four Type F screws to attach the housing to the floor panel.

FIGURE: 1


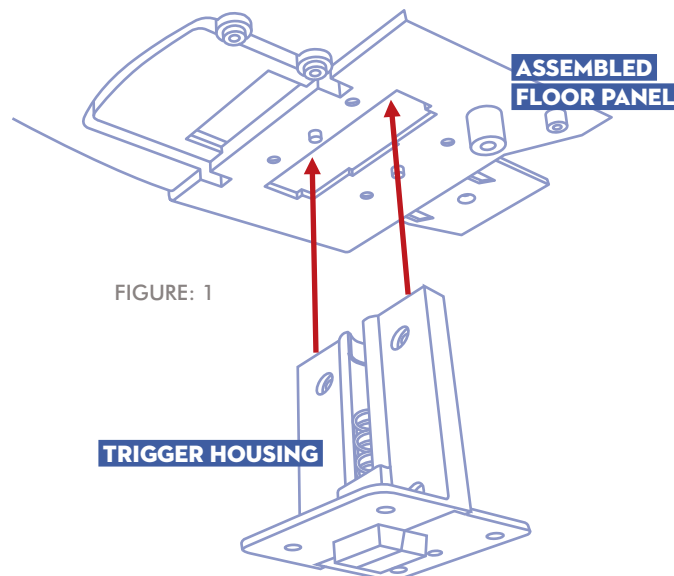


FIGURE: 2

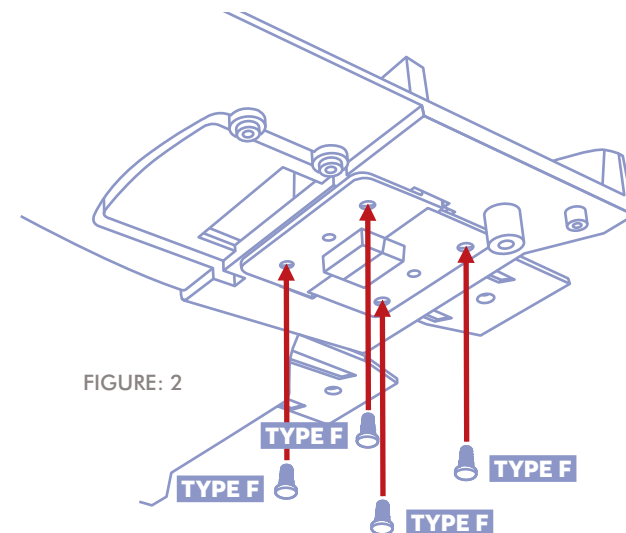

Put this section to one side for the moment.

Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 9

### REAR SEAT

**PARTS: 034-C, 034-D,  
ASSEMBLED FLOOR PANEL**

Fit the middle part of the rear seat (**034-D**) to the underside of the rear seat (**034-C**). Use two Type E screws to fasten them together. Then fix the rear seat section to the back of the floor panel with two Type O screws.

FIGURE: 1

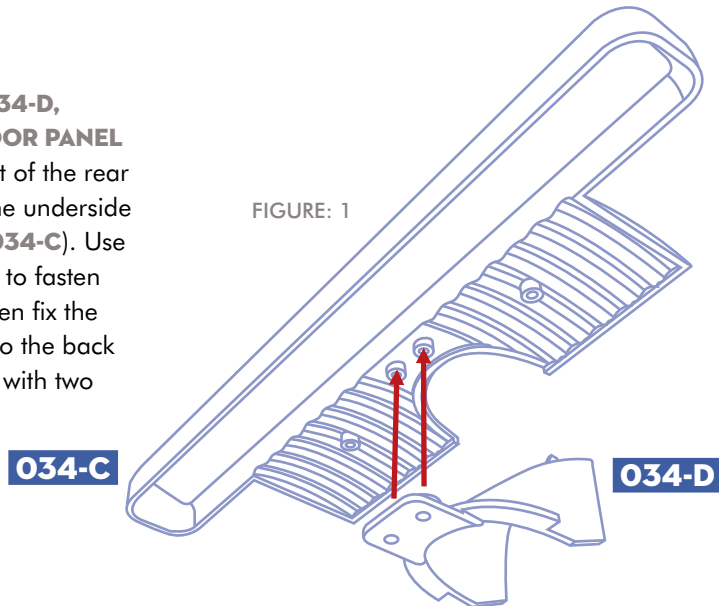


FIGURE: 2

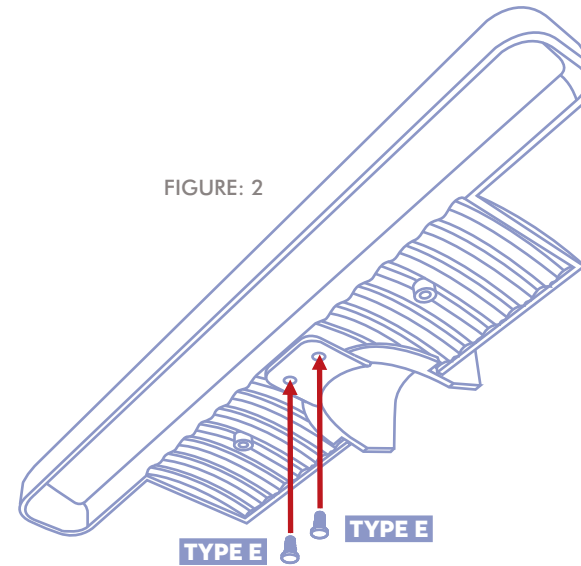


FIGURE: 3


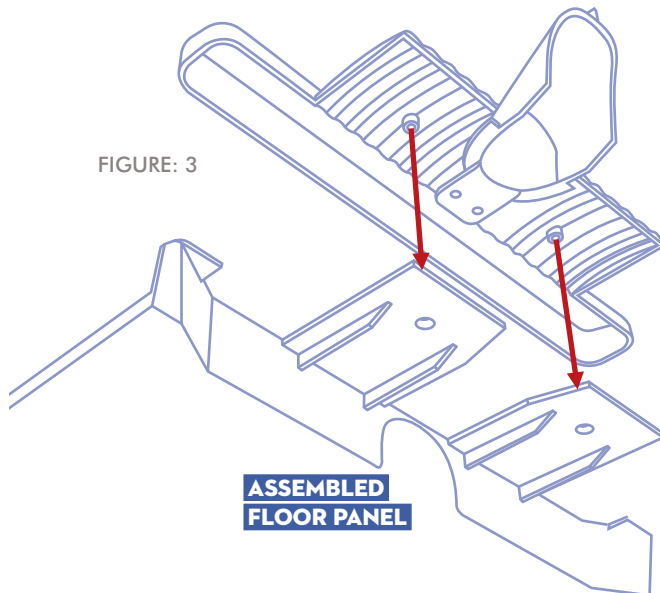


FIGURE: 4

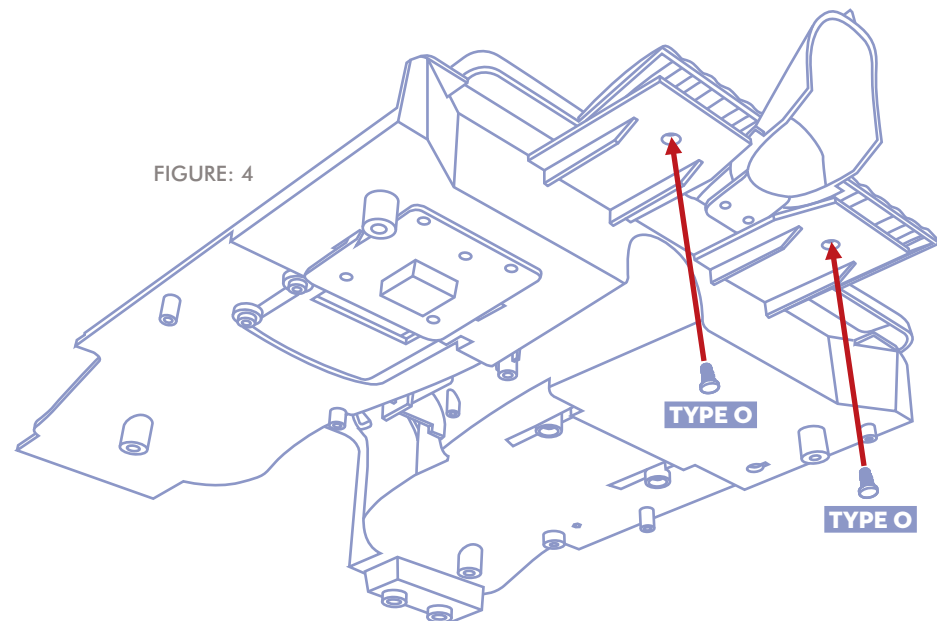

# THE ENGINE & INTERIOR

# FLOOR PANEL

 
 
Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 10

### EJECTOR SEAT TRIGGER

**PARTS: 032-A, 034-A, ASSEMBLED FLOOR PANEL**

Fit the ejector seat trigger (**034-A**) to the ejector seat lever (**032-A**) as shown. Carefully place it in position over the gear stick retainer in the centre of the assembled floor panel. Use a Type J screw to fix it all together.

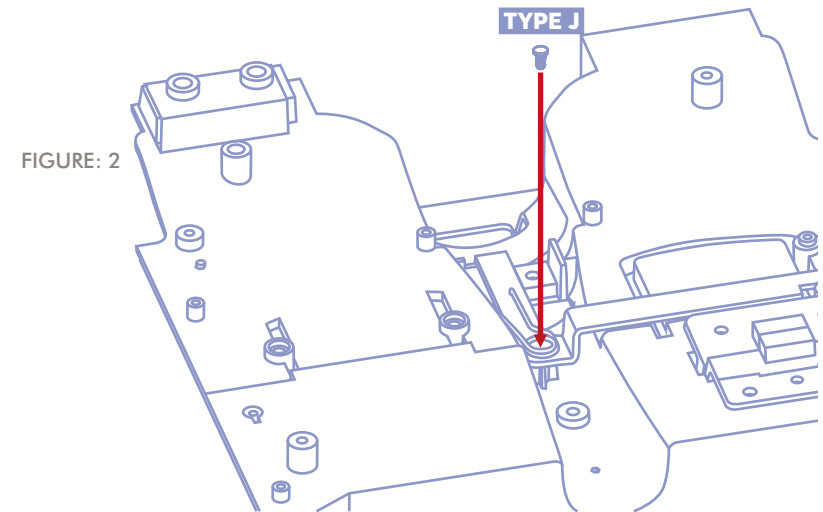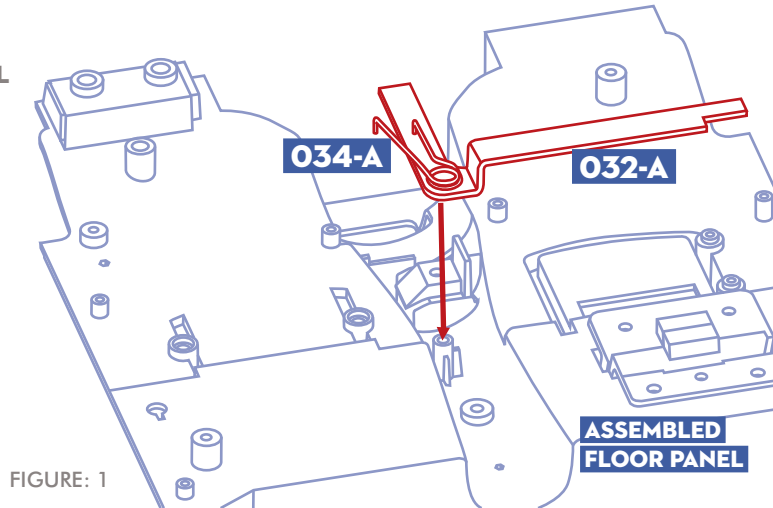

## STEP 11

**PARTS: ASSEMBLED FLOOR PANEL, 032-C**

Carefully clip the ejector seat lever and the ejector seat lever cover #2 (**032-C**) as shown. Fasten this to the floor panel with two Type Q screws.


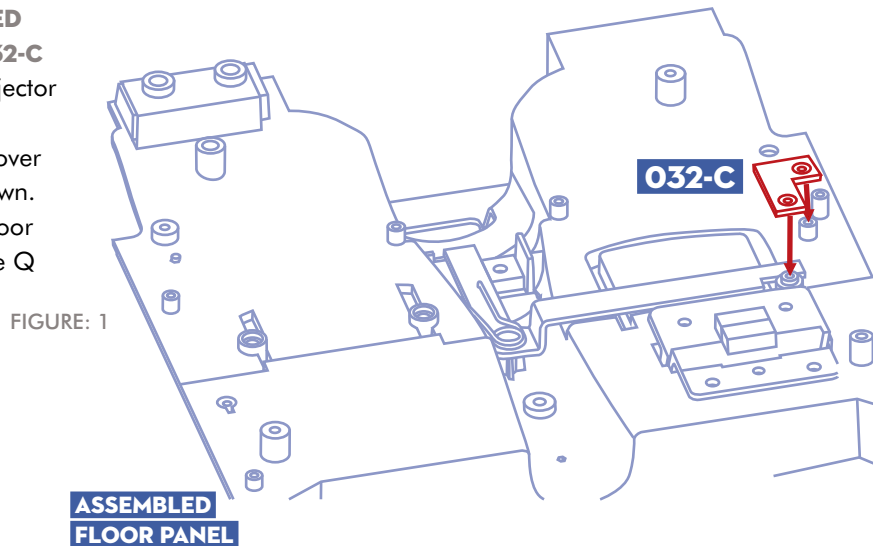


FIGURE: 2

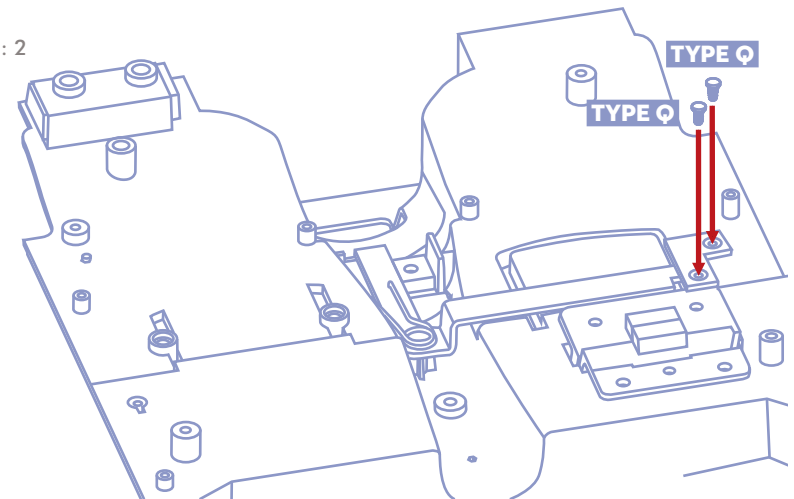

# THE ENGINE & INTERIOR

# FLOOR PANEL

Constructing the **FLOOR PANEL** of your Aston Martin DB5 model.

## STEP 12

**PARTS: 032-B,  
ASSEMBLED FLOOR  
PANEL**

Place the ejector seat lever cover #1 (**032-B**) as shown. Screw this into the floor panel with two Type I screws.


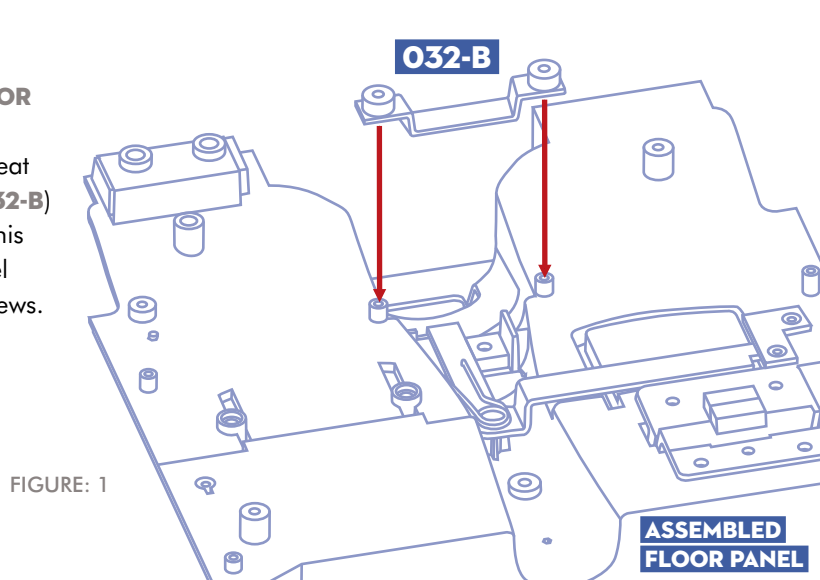


FIGURE: 2

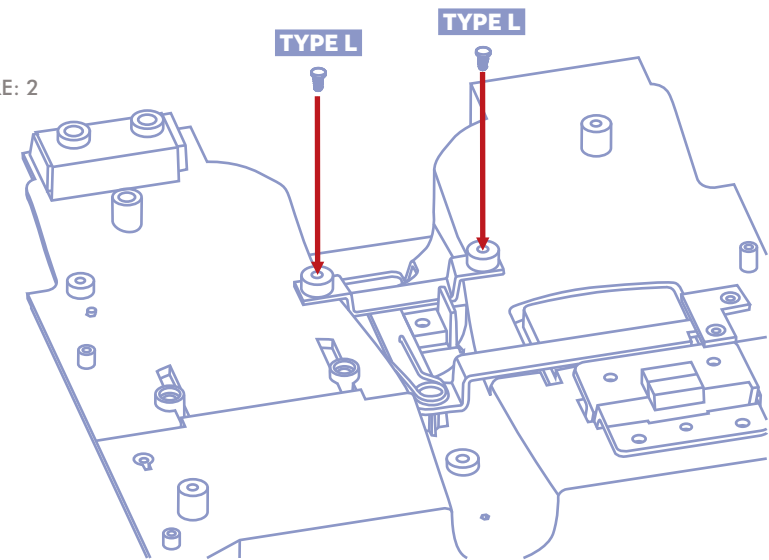

## STEP 13

**PARTS: DRIVER'S SEAT,  
WEAPONS TRAY,  
ASSEMBLED FLOOR PANEL**

Place the weapons tray in position on the floor panel as shown. Carefully place the driver's seat over the tray. This is screwed in place by two Type Y screws from underneath the floor panel.


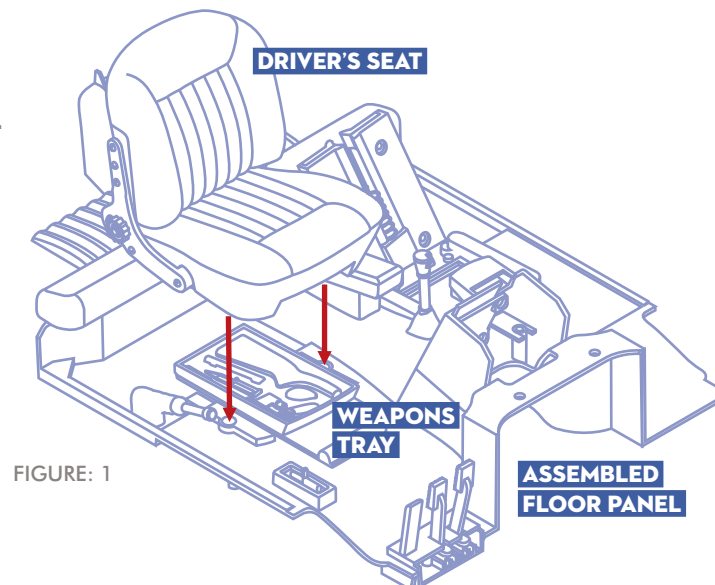


FIGURE: 2

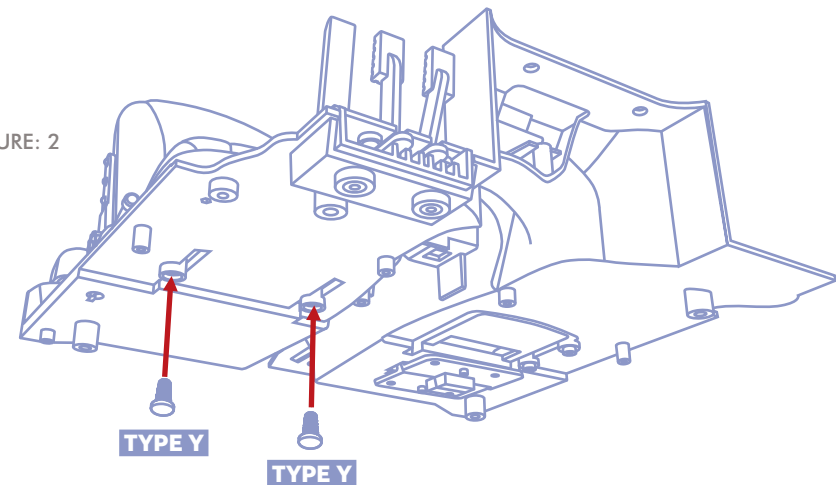

Put this section to one side for the moment.