

 
THE ENGINE & INTERIOR

BULKHEAD

Constructing the **BULKHEAD** of your Aston Martin DB5 model.

THE PARTS YOU WILL NEED:

- 012-E** : Rear bulkhead and electrical connections
- 012-F** : Screenwasher bottle
- 013-A** : Header tank
- 013-B** : Right bulkhead
- 013-C** : Left bulkhead
- 013-D** : Left brake servo
- 014-A** : Right brake servo
- 014-B** : Air box
- 014-C** : Cleaner hose
- 014-D** : Air cleaner
- 014-E** : Air cleaner cover
- 014-F** : Alternator controls
- 014-G** : Brake fluid reservoirs (2)
- 015-A** : Starter solenoid
- 015-B** : Ignition coil
- 015-C** : Blower trunking
- SCREWS** : Type L (x1), P (x2), Q (x12)

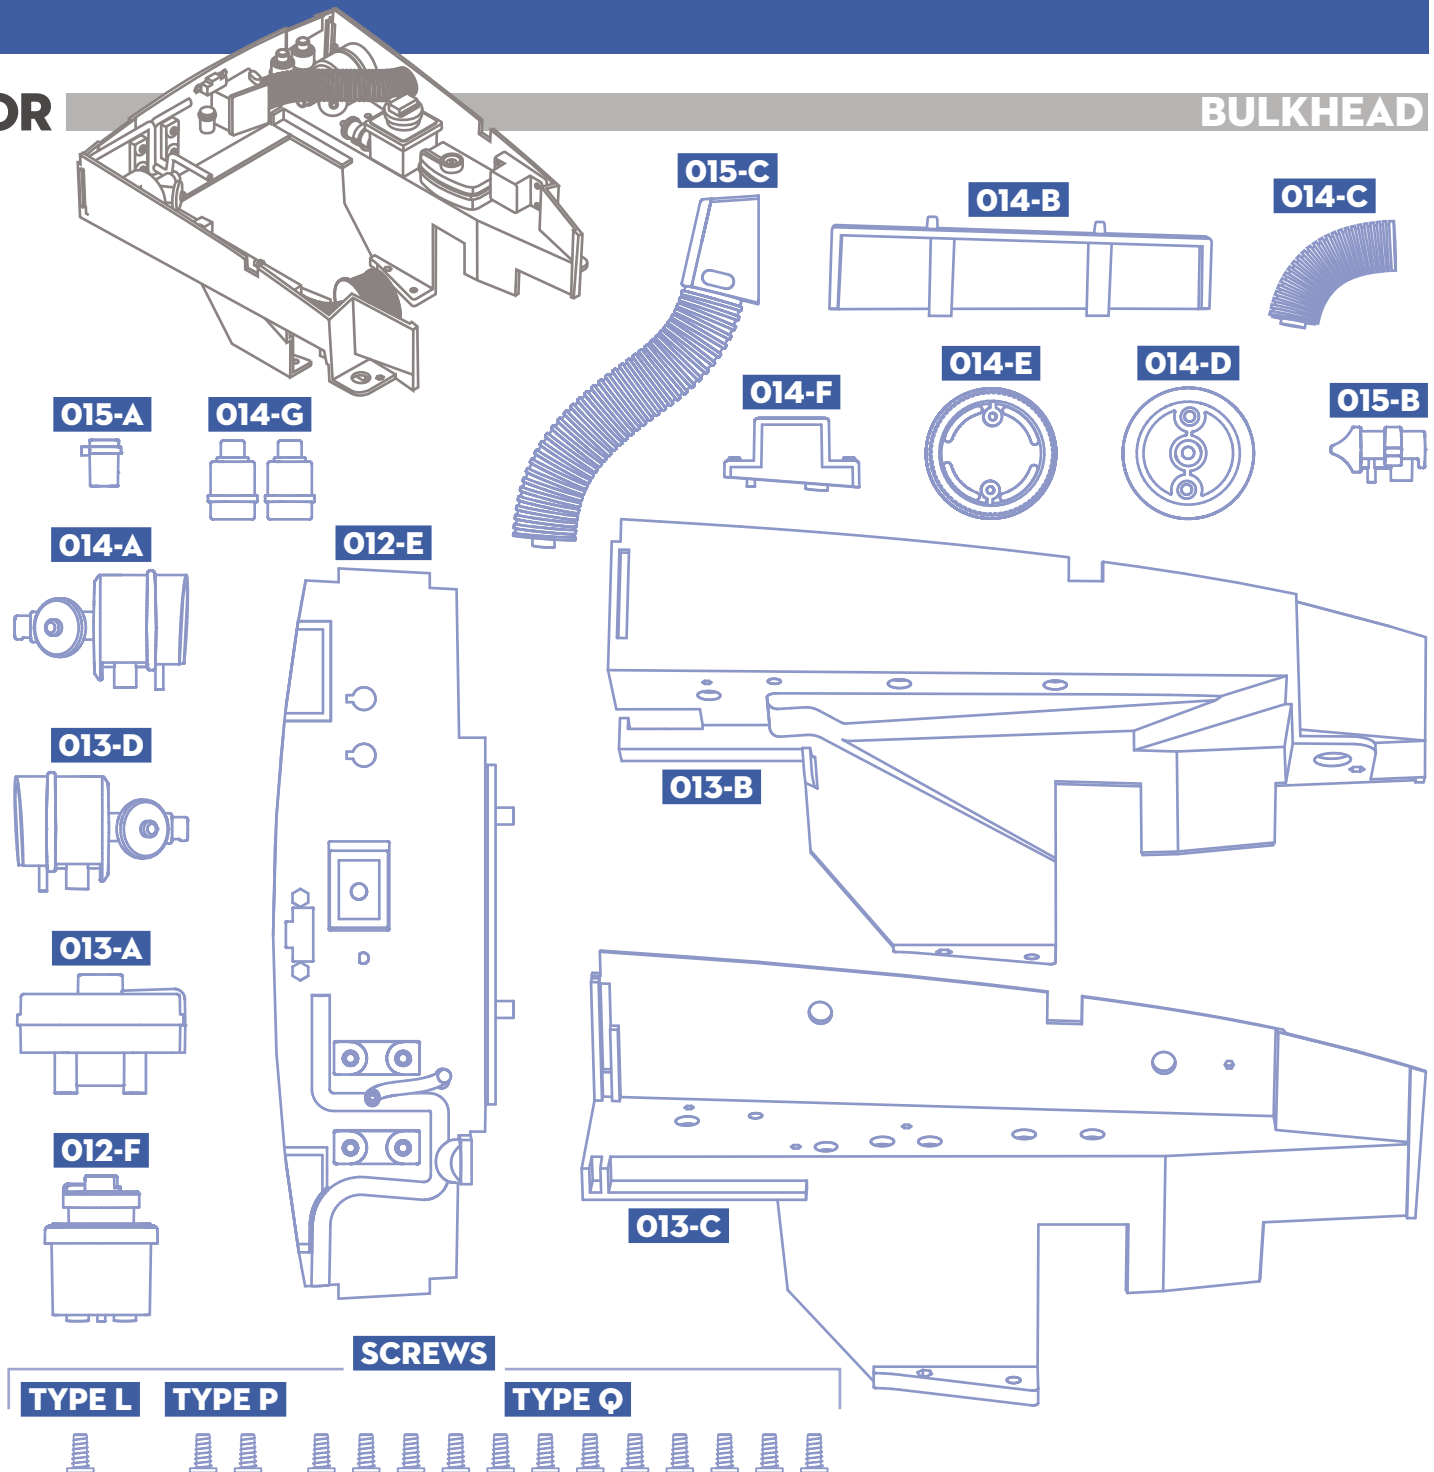

NOTE: Parts not shown to scale.

THE FRONT BODY

BULKHEAD


Constructing the **BULKHEAD** of your Aston Martin DB5 model.

STEP 1

PARTS: 012-E, 015-A, 014-G

One at a time, attach the two pieces of the brake fluid reservoir (**014-G**) to the rear bulkhead (**012-E**).


These are fastened with two Type Q screws through the back, as shown. Clip the starter solenoid (**015-A**) to the bulkhead.

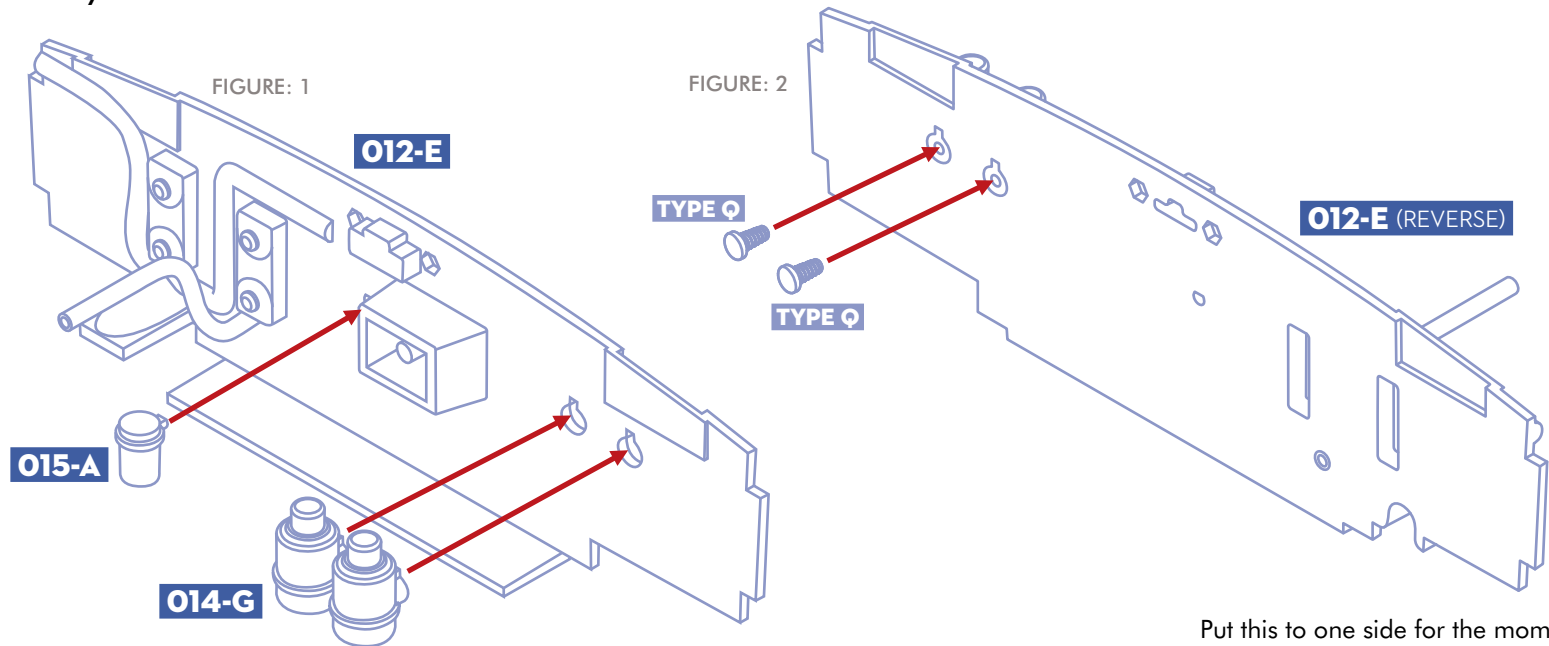

STEP 2

PARTS: 014-C, 014-D


Clip the air cleaner (**014-D**) to the air cleaner hose (**014-C**). This is fastened with a single Type L screw.

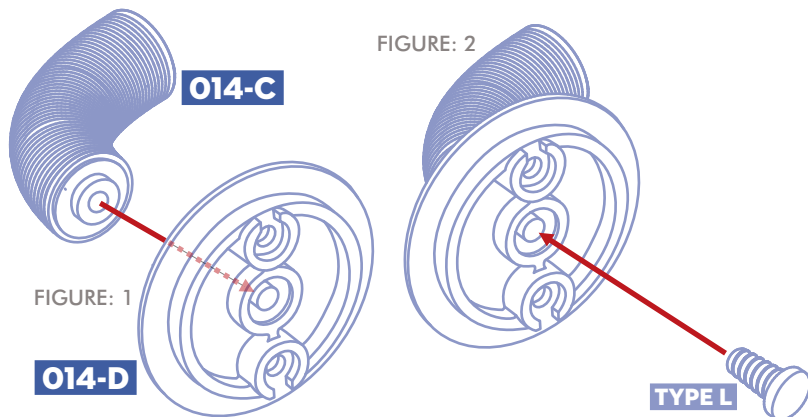

STEP 3

PARTS: 014-C/014-D, 014-E


Clip the assembled air cleaner and its hose to the air cleaner cover (**014-E**). This is attached by two Type P screws.

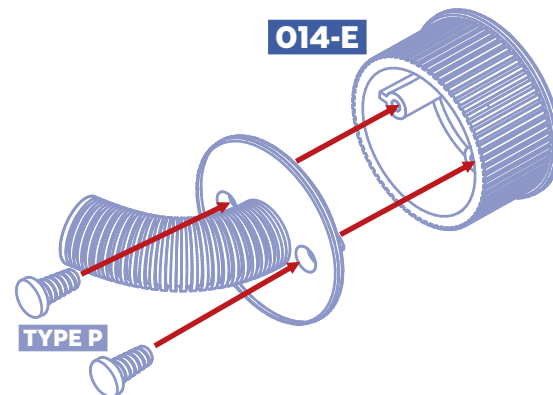

STEP 4

PARTS: ASSEMBLED AIR CLEANER, 014-B

Clip the air cleaner parts to the air box (**014-B**).

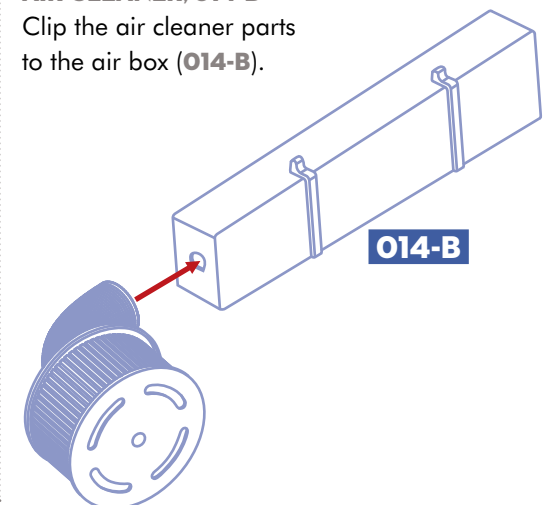

THE FRONT BODY

BULKHEAD

Constructing the **BULKHEAD** of your Aston Martin DB5 model.

STEP 5

PARTS: AIR CLEANER, 013-B

Clip the air cleaner onto the right bulkhead (**013-B**). Fasten it with two Type Q screws that go through the base of the bulkhead.


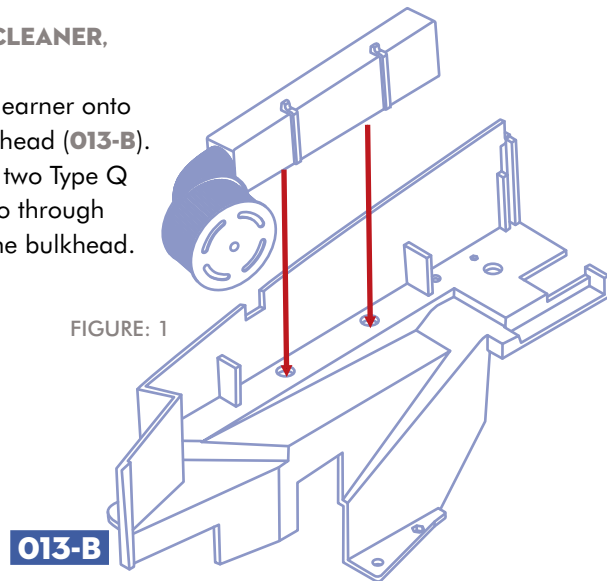



FIGURE: 2

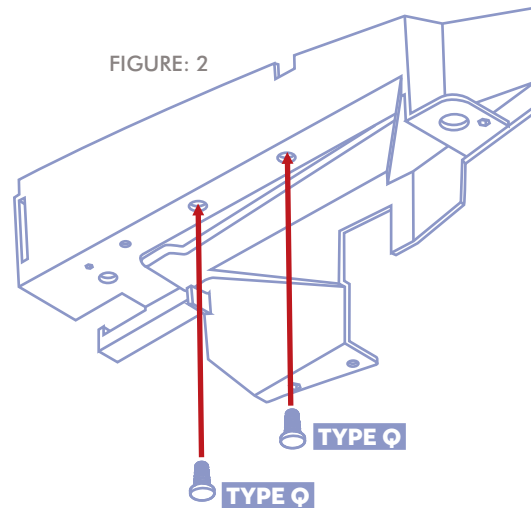

STEP 6

PARTS: 013-D


Attach the right brake servo (**013-D**) to the base of the right bulkhead, fixing it in place with a single Type Q screw.

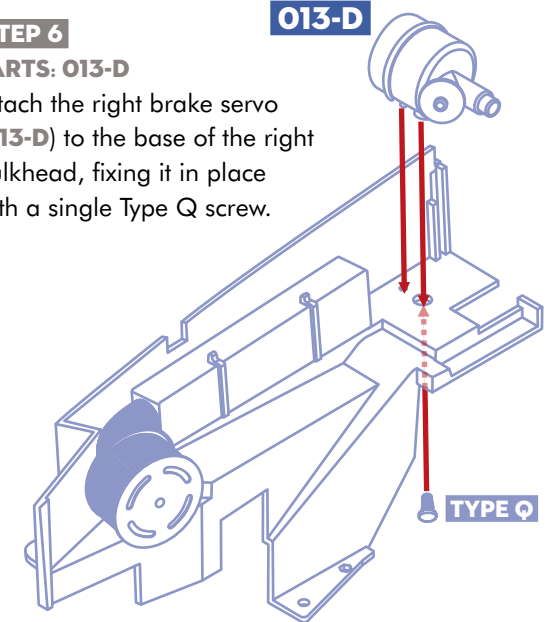

STEP 7

PARTS: 013-C, 014-F

Using a Type Q screw, fix the alternator controls (**014-F**) to the side of the left bulkhead (**013-C**).

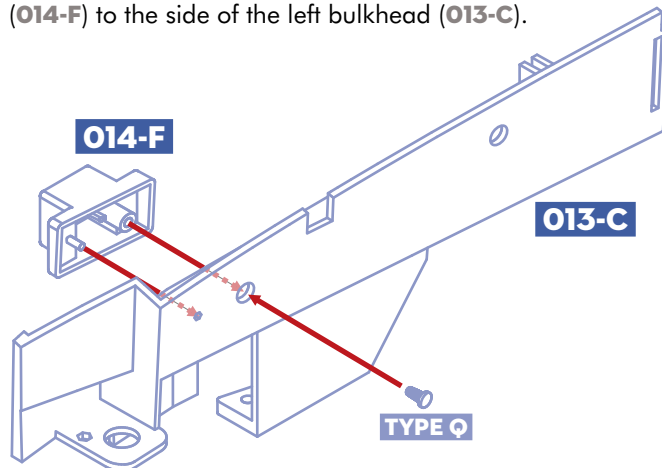

STEP 8

PARTS: 012-F, 013-A, 013-C, 014-A, 015-B

Use six Type Q screws to fix the header tank (**013-A**), left brake servo (**014-A**), screenwasher (**012-F**) and the ignition control (**015-B**) to the base of the left bulkhead (**013-C**). Be patient: this can be quite fiddly!


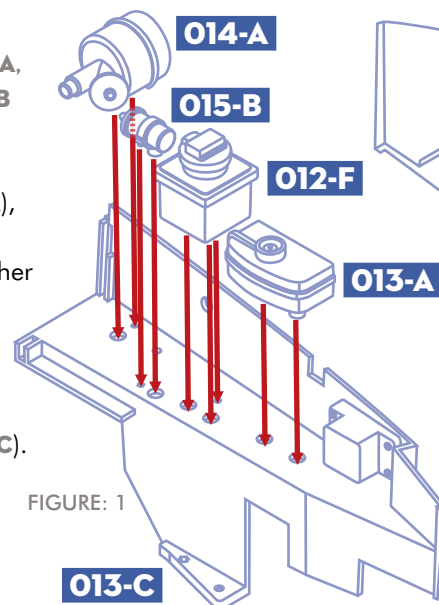


FIGURE: 2

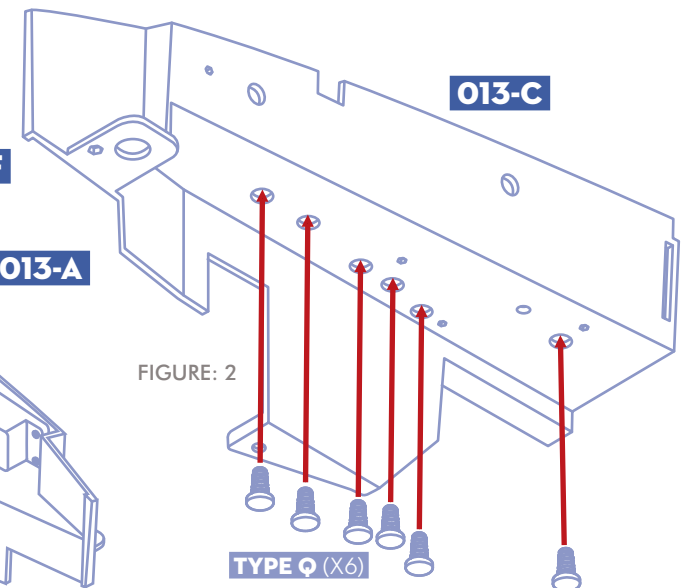

THE FRONT BODY



BULKHEAD

Constructing the **BULKHEAD** of your Aston Martin DB5 model.

STEP 9

PARTS: THE BULKHEAD


Fit the corner joints of three sections of the bulkheads together.

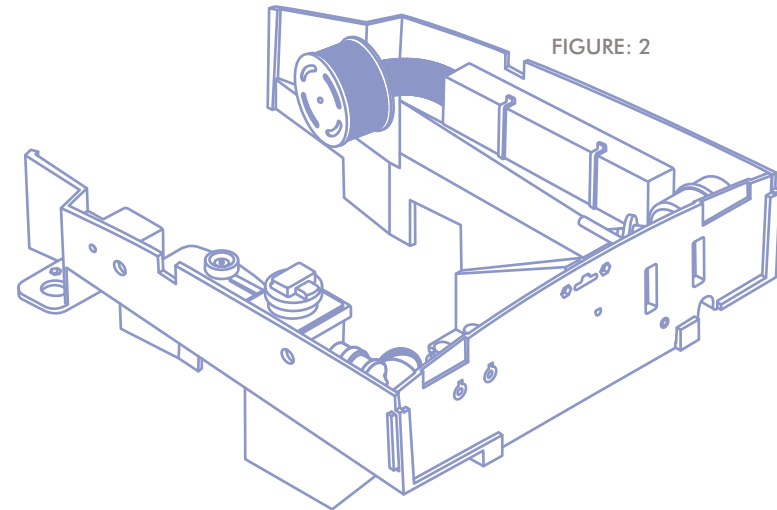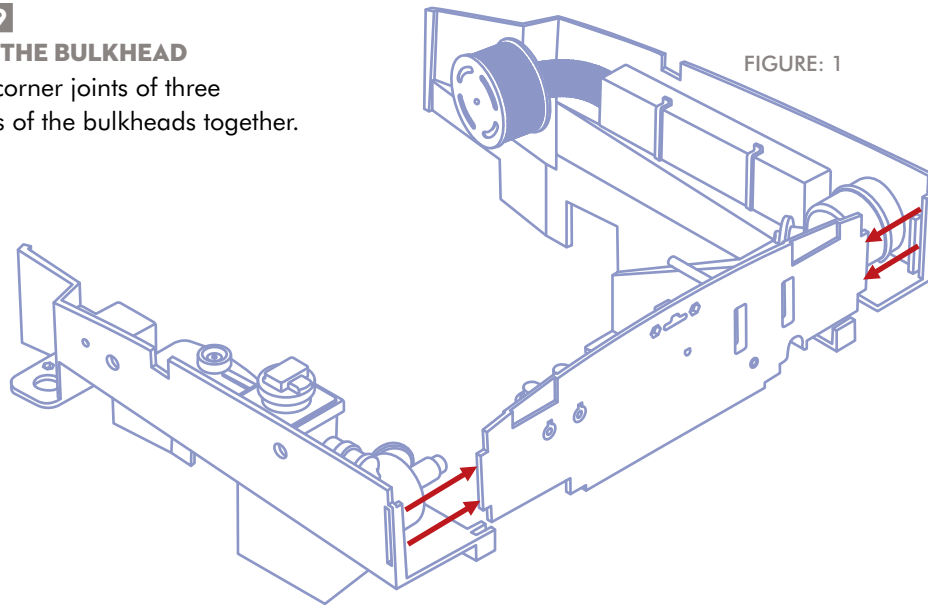

STEP 10

PARTS: 015-C


Fit the blower trunking (015-C) to its specially shaped receiver part on the rear bulkhead.

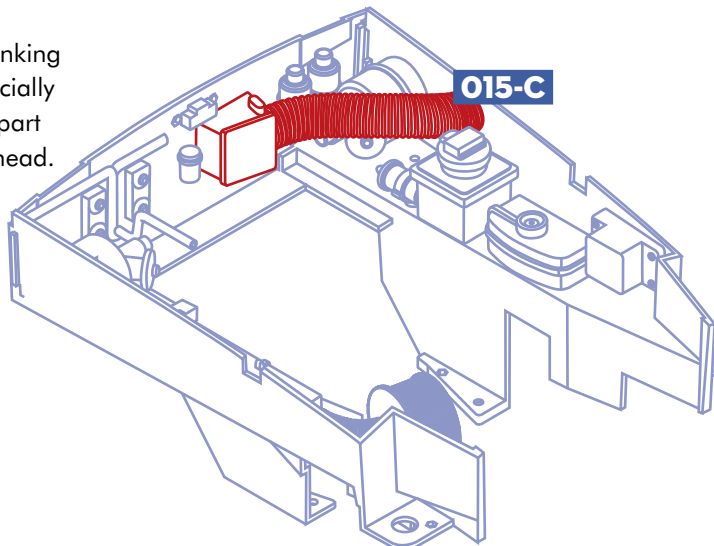

STEP 11

PARTS: THE BULKHEAD, 015-C

Clip the free end of the blower trunking to the side of the right bulkhead. Use a Type Q screw to fix this in place as shown.

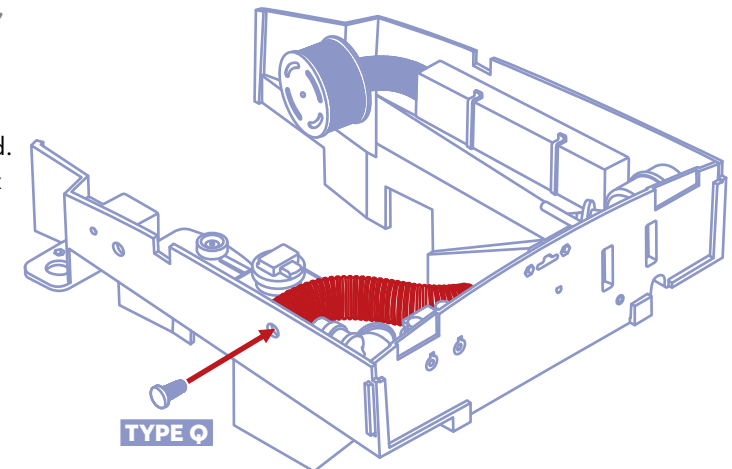

Set the assembled parts aside for the moment.